


## SECTION BF

### PETROL (Fuel) PUMP

# PETROL (Fuel) PUMP

5354

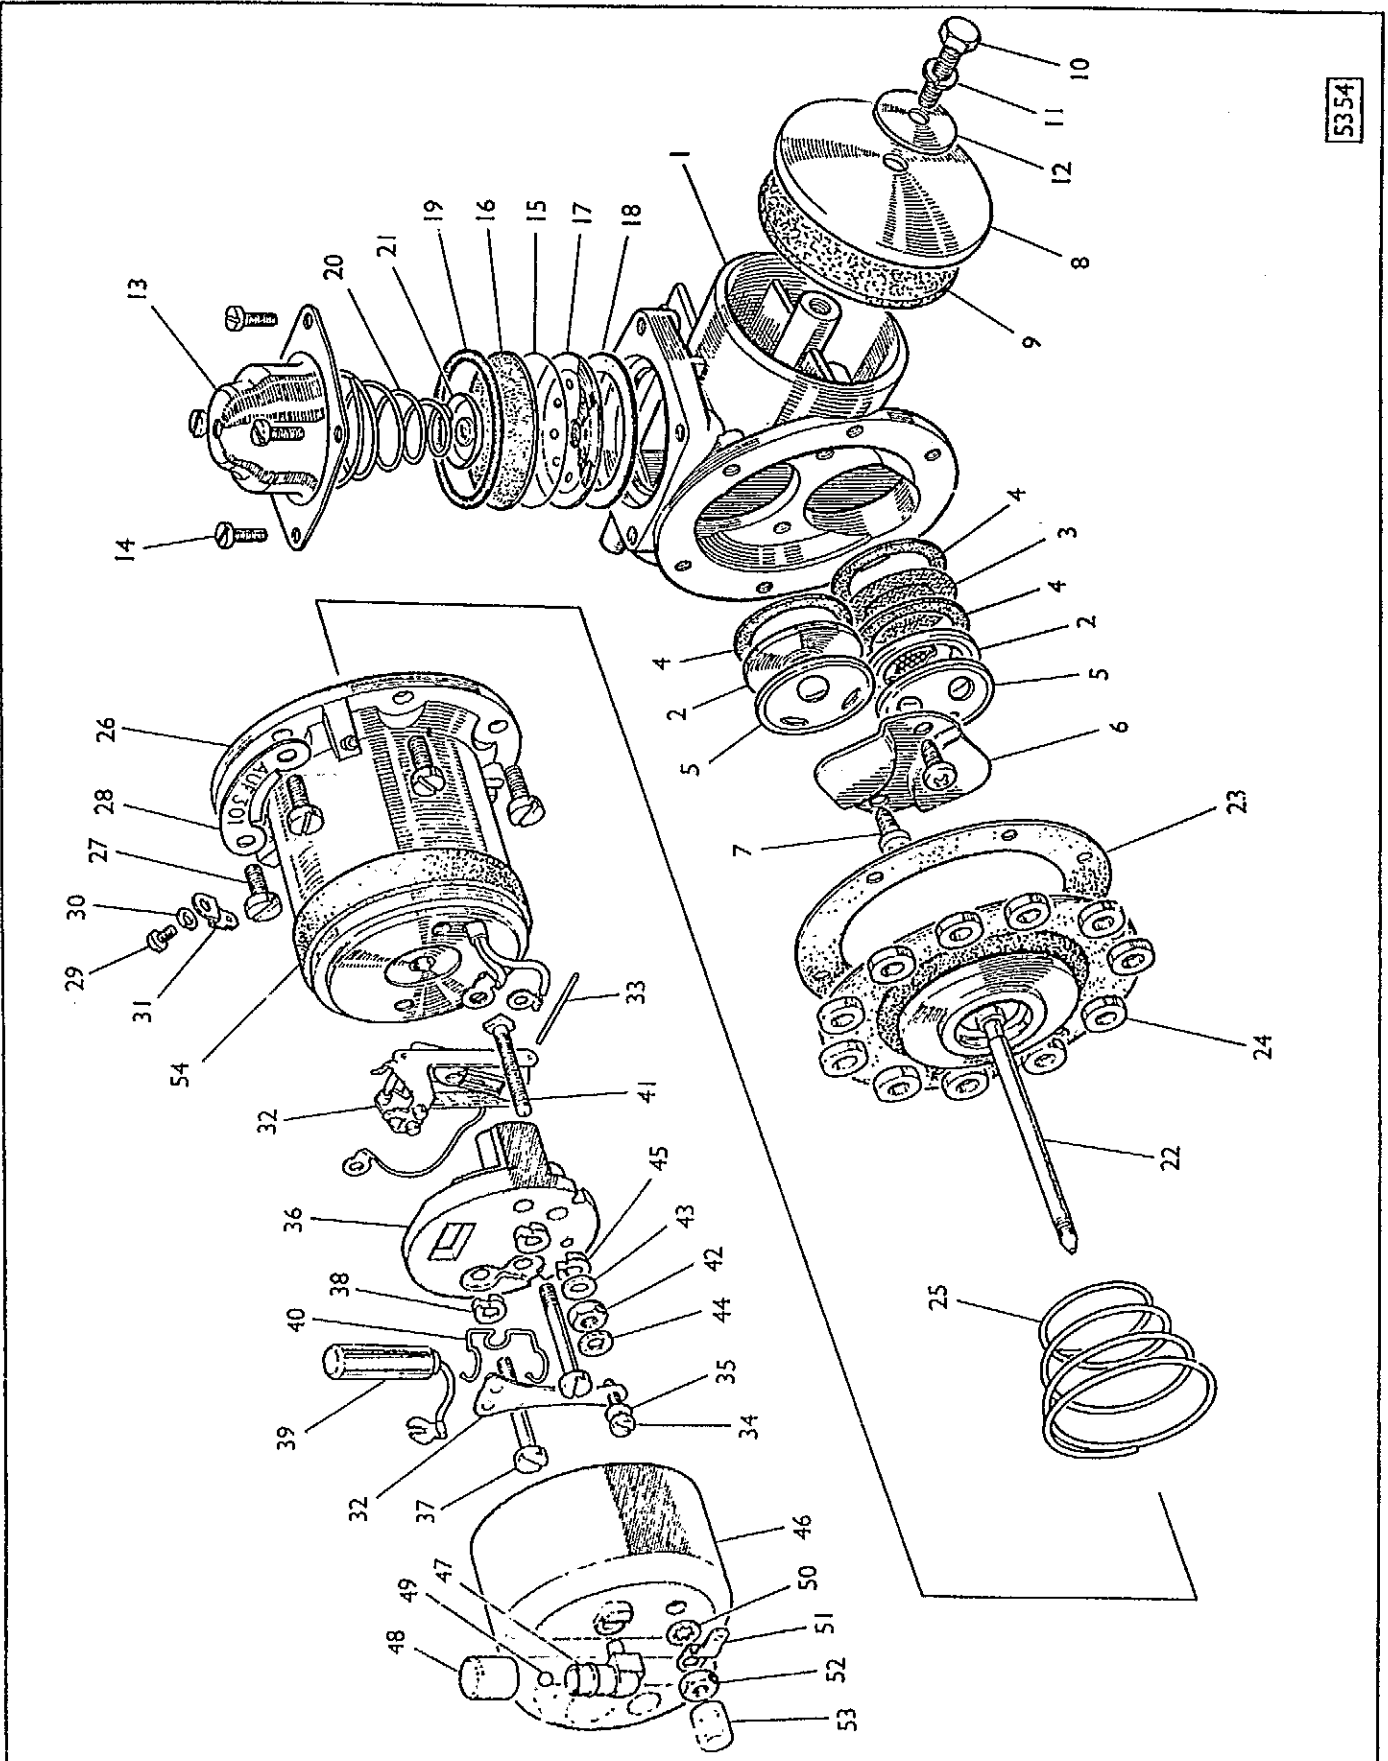

## SECTION BF

2nd Issue

PETROL (Fuel) PUMP

Plate Ref.	Rootes Part Number	S.U. Part Number	DESCRIPTION	No. per Veh.	REMARKS
1	1224634	AUF 301/1	PETROL (Fuel) Pump ... ..	1	
2	5042633	AUB 662	Body ... ..	1	
3	5042634	AUB 6061 or 6031	Valve assembly—Inlet and Outlet ... ..	2	} Not supplied
4	5042636	AUB 617	Inlet filter ... ..	1	
5	5042635	AUB 618	Sealing washer ... ..	3	
6	5042637	AUB 652	Cover ... ..	2	
7		AUB 653	Clamp plate ... ..	1	
8		AUB 597	Screw—Self-tapping ... ..	2	
9	5042639	AUA 574	Dished cover ... ..	1	
10	5042638	AUA 573	Joint washer ... ..	1	
11	5042641	AUC 2694	Fixing bolt 2 B.A. ... ..	1	
12	9660121	AUC 2246	Spring washer ... ..	1	
13	5042640	AUA 575	Dished washer ... ..	1	
14	5042642	AUB 695	Cover—Air bottle ... ..	1	
15	5042649	AUC 2588	Screw, 4 B.A.—Cover to body ... ..	4	
16	5042645	AUB 696	DIAPHRAGM (Nylon) ... ..	1	
17	5042646	AUB 693	Support ... ..	1	
18	5042647	AUB 694	Plate ... ..	1	
19	5042650	AUB 675	Washer—Plate ... ..	1	
20	5042648	AUB 711	Sealing ring ... ..	1	
21	5042643	AUB 697	Spring ... ..	1	
22	5042644	AUB 698	Cap—Spring ... ..	1	
23	5042651	AUB 6071	DIAPHRAGM ASSEMBLY (Barrier) ... ..	1	
24	5042652	AUB 706	Joint Washer ... ..	1	
25	5042653	AUA 1433	Roller ... ..	11	
26	5042654	AUB 521	Spring ... ..	1	
27	5042657	AUB 6080	COIL HOUSING ... ..	1	
28	39033080	AUB 660	Screw, 2 B.A.—Coil housing to pump body ... ..	6	
29		AUB 687	Identity label ... ..	1	Not supplied
30	39031040	AUA 699	Earth screw—4 B.A. ... ..	1	
31		AUA 585	Spring washer ... ..	1	Not supplied
32	9227107	AUA 692	Lucar connector—Earth screw ... ..	1	
33	5042658	AUA 6021	ROCKER and BLADE ... ..	1	
34	5042661	AUA 1435	Spindle—Rockers ... ..	1	
35		AUA 565	Screw, 5 BA—Blade ... ..	1	Not supplied
36	5042659	AUA 566	Dished washer—Blade ... ..	1	
37	5042660	AUA 6034	PEDESTAL ... ..	1	
38	5042662	AUA 1459	Screw ... ..	2	
39		AUA 1863	Spring washer } Pedestal to housing ... ..		Not supplied
40	5042667	AUA 5060	Condenser ... ..	1	
41	5042666	AUA 5059	Spring clip—Condenser ... ..	1	
42	5042663	AUA 1468	Terminal screw 2 B.A. ... ..	1	
43	5042664	AUA 1661	Terminal Nut ... ..	1	
44	5042665	AUA 1662	Lead washer ... ..	1	
45	5042669	AUB 609	Washer ... ..	1	
46		AUA 1863	Spring washer } Terminal screw ... ..		Not supplied
47	5042668	AUB 707	END COVER ... ..	1	
48	5042670	AUB 702	Valve body—Ventilator ... ..	1	
49	5042671	AUB 703	Ventilator cap ... ..	1	
	5042672	AUB 704	Ball valve ... ..	1	

PETROL (Fuel) PUMP

Plate Ref.	Rootes Part Number	S.U. Part Number	DESCRIPTION	No. per Veh.	REMARKS
			<b>PETROL (Fuel Pump)—continued</b>		
50	9663123	AUA 4643	Shakeproof washer	1	
51	9227107	AUA 692	Lucar connector	1	
52	5042673	AUA 878	Terminal nut	1	
53	5042674	AUB 611	Insulating sleeve	1	
54	AUB 612		Sealing tape	Not supplied	
	AUB 716		Sealing band		
	1224807		Union—Fuel pump adaptor	2	
	9078035		Washer, fibre—Union	2	
			<b>PETROL (Fuel) PUMP MOUNTINGS</b>		
	1224769		Mounting clip	1	
	1224771		Insulator	1	
	1224756		Support Channel	1	
	19503052		Screw, No. 10 U.N.F. × ½"	3	
	9660122		Washer, ⅜" spring		
	5220700		Nut, No. 10 U.N.F.	3	
	5220701		Nut, ⅜" U.N.F. ...		
	9660201		Washer, ⅜" spring	1	
	5220695		Screw, ¼" U.N.F. × ¼" Hex. head		
	9571043		Nut, ¼" U.N.F. Nyloc	1	
			to channel		